

CAMPOMATIC

SB450

HAND BLENDER



Made in China




INSTRUCTION MANUAL

Caution: Read and follow all safety and operating instruction before first use of this product.

Campomatic S.R.L. Via Configliachi 5/B . 35031, Abano Terme (Padova), ITALIA

WWW.CAMPOMATIC.COM

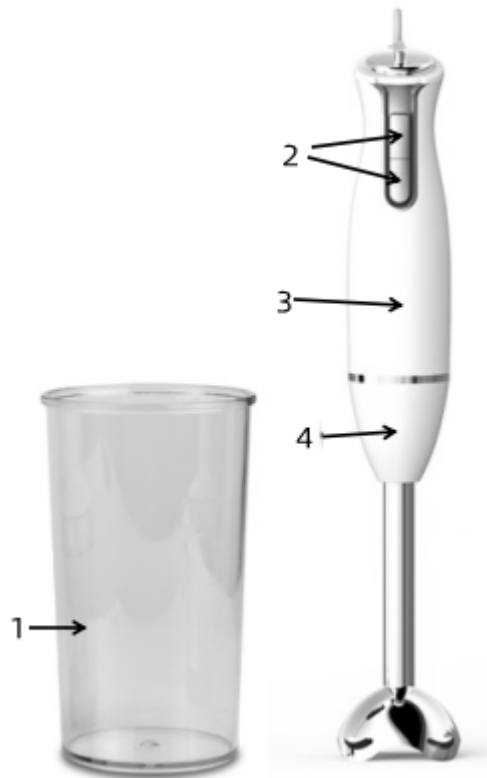

PARTS NAME

1. Cup

2. Switch

3. Motor Unit

4. Blender Stick

IMPORTANT SAFETY RECOMMENDATION

1. Read the instructions carefully before using your appliances for the first time.
2. Make sure the rated voltage in your local place is conformity to the rating plate on the unit.
3. Do not use outdoors. The appliance is household use only.
4. Unplug your appliance when you finish using it or clean it.
5. Do not use the appliance if it has damaged. You should contact an approved service center.
6. If the power cable or plug are damaged, do not use the appliance. To avoid any risk, these must be replaced by an approved service center.
7. Do not allow long hair, scarves etc. to hang down over blender stick or whisk when they are in operation.
8. Never put the appliance close to heat source.
9. Please the note: The blades of the appliance are sharp. Handle the blades with care.
10. Before using your appliance first time, clean the various accessories carefully. Do not immerse motor unit in water or any liquid.
11. Save the instruction for your future reference.
12. Switch off and disconnect from the supply the appliance before changing accessories or approaching parts, which move in use.
13. Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning.
14. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
15. Children shall not play with the appliance.
16. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
17. If the supply component is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

HOW TO USE STICK BLENDER

1. Insert the motor unit into the hole on the top of the blender stick until it is locked.
2. Plug in the appliance.
3. The beaker must be not more than 1/2 full to prevent over flowing.
4. Always use the stick blender to blend ingredients together with water or other liquid.
5. The stick blender is suitable for the following ingredients: fruits and vegetables, baby food, soup, batter, mixed drinks; Do not use the stick blender to blend hard foods only, such as coffee bean, ice cubes, sugar, cereals, chocolate etc.
6. Two speeds set for your different blending various ingredients.
7. **The hand blender to open 30 seconds stopped a minute as a working cycle, work up to 5 cycles, 5 cycles later need to be mixer cooling to room temperature, and then continue to use.**
8. When you take out the stick from the motor unit, make sure of it unplugged.
9. Its blade is sharp, handle it with care to avoid any hurt of you.

HOW TO CLEANING

1. Unplug the appliance.
2. Clean the body of the appliance with a damp cloth. Do not immerse the motor unit in any liquid.
3. The chopper gear box may be rinsed under the tap, but do not immerse it in water.
4. Clean the blades and accessories immediately after using, and avoid bacterial growth. Take care of the blades because they are too sharp

IMPORTANT SAFETY RECOMMENDATION

1. Read the instructions carefully before using your appliances for the first time.
2. Make sure the rated voltage in your local place is conformity to the rating plate on the unit.
3. Do not use outdoors. The appliance is household use only.
4. Unplug your appliance when you finish using it or clean it.
5. Do not use the appliance if it has damaged. You should contact an approved service center.
6. If the power cable or plug are damaged, do not use the appliance. To avoid any risk, these must be replaced by an approved service center.
7. Do not allow long hair, scarves etc. to hang down over blender stick or whisk when they are in operation.
8. Never put the appliance close to heat source.
9. Please the note: The blades of the appliance are sharp. Handle the blades with care.
10. Before using your appliance first time, clean the various accessories carefully. Do not immerse motor unit in water or any liquid.
11. Save the instruction for your future reference.
12. Switch off and disconnect from the supply the appliance before changing accessories or approaching parts, which move in use.
13. Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning.
14. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
15. Children shall not play with the appliance.
16. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
17. If the supply component is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

HOW TO USE STICK BLENDER

1. Insert the motor unit into the hole on the top of the blender stick until it is locked.
2. Plug in the appliance.
3. The beaker must be not more than 1/2 full to prevent over flowing.
4. Always use the stick blender to blend ingredients together with water or other liquid.
5. The stick blender is suitable for the following ingredients: fruits and vegetables, baby food, soup, batter, mixed drinks; Do not use the stick blender to blend hard foods only, such as coffee bean, ice cubes, sugar, cereals, chocolate etc.
6. Two speeds set for your different blending various ingredients.
7. **The hand blender to open 30 seconds stopped a minute as a working cycle, work up to 5 cycles, 5 cycles later need to be mixer cooling to room temperature, and then continue to use.**
8. When you take out the stick from the motor unit, make sure of it unplugged.
9. Its blade is sharp, handle it with care to avoid any hurt of you.

HOW TO CLEANING

1. Unplug the appliance.
2. Clean the body of the appliance with a damp cloth. Do not immerse the motor unit in any liquid.
3. The chopper gear box may be rinsed under the tap, but do not immerse it in water.
4. Clean the blades and accessories immediately after using, and avoid bacterial growth. Take care of the blades because they are too sharp