

CAMPOMATIC

KW20B

KETTLE



Made in China



INSTRUCTION MANUAL

Caution: Read and follow all safety and operating instruction before first use of this product.

Campomatic S.R.L. Via Configliachi 5/B . 35031, Abano Terme (Padova), ITALIA

WWW.CAMPOMATIC.COM

READ ALL THE INSTRUCTIONS BEFORE USING

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. The power cord on this product is not replaceable by the user. If it is damaged it must only be replaced by a qualified electrician.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Boiling water and steam can cause serious burns. Always place the appliance on a stable, flat surface.
4. Only use with the power base supplied.
5. Before connecting to the power outlet make sure that the voltage indicated on the rating label, located on the bottom of the power base, is the same as the supply voltage in your home. If not, do not use the appliance and return it to your dealer.
6. To prevent electrical hazards, never put the kettle or power base in water or any other liquid, and do not allow water to enter the electrical parts.
7. Keep the kettle and its power cord out of the reach of children and pets. Close supervision is required when the appliance is used near children.
8. The exterior of the appliance will get very hot during use. Always take care when handling. Never lift the appliance by the lid. Always use the handle.
9. Always ensure the appliance is switched off before removing from the power base and unplugged from the socket before cleaning or when not in use.
10. Beware of steam being emitted from the spout or lid, especially during refilling.
11. This appliance is intended for normal household use only. It must not be used for anything other than its intended purpose.
12. Do not use this appliance outdoors.
13. Do not place the appliance on or near any potentially hot surfaces e.g. oven hobs.

14. Do not allow the power cord to overhang from work surfaces, or to touch hot surfaces or to become knotted.
15. Do not operate this appliance if the power cord or plug are damaged, or if the appliance malfunctions or is damaged in anyway. Check the power cord regularly for signs of damage/wear.
16. Do not open the lid whilst the kettle is boiling.
17. Do not fill the kettle above the MAX mark. Boiling water may splash out if overfilled.
18. To avoid possible steam damage, turn spout away from walls and do not use under cabinets.
19. The appliance contains no user-serviceable parts. This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

PREPARATION FOR USE

1. Remove all packing from the kettle and its power base. Before using the kettle for the first time, or if it has been out of use for a long time fill to the max mark and boil, then discard the boiled water and rinse the kettle out with cold water.
2. Before connecting the appliance to the mains supply check that the voltage indicated on the rating plate corresponds with the mains voltage in your home.

INSTRUCTIONS FOR USE

1. Always remove the kettle from the power base before filling.
2. Lift the lid.
3. Fill the kettle between the MIN and MAX marks on the water level indicator with cold water.
4. Replace the lid and place the kettle back on the power base. Make sure the lid is securely fitted on the kettle before boiling.
5. Position the kettle on the power base.
6. Plug the power base into the power outlet and switch on at the mains.
7. To start boiling press the ON/OFF switch to the down position.

8. The power indicator will illuminate and the kettle will start to boil. **NEVER REMOVE THE LID DURING BOILING.**

9. When the water has boiled the kettle will switch off automatically and the power indicator will extinguish.

10. You can stop the boiling process at any time by pressing the switch to the OFF position.

11. After the kettle has switched off automatically, there may be a short delay before it can be re-boiled. This is usually no more than 20 seconds.

12. The safety cut-out will operate if you accidentally switch on the kettle when it is empty or allow it to boil dry. Wait 15 minutes for the cut-out to reset before refilling with cold water and boiling.

CLEANING

1. Always unplug the kettle from the mains supply and allow to cool down completely before storing or cleaning.

2. Never immerse any part of the power cable, plug, power base or kettle in water or any other liquid.

3. Wipe the exterior of the kettle using a damp cloth. Dry thoroughly. Never use harsh chemicals or abrasive cleaning agents as these may damage the finish of your kettle.

4. Over a period of time lime scale can build up inside your kettle. To remove lime scale half fill the kettle with water and add the juice of a lemon. Boil the kettle and allow to stand for 15 minutes before discarding. Repeat several times using cold water only.

safety, as insertion into a 13 amp socket could cause an electrical hazard.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

TECHNICAL DATA:

Rated Voltage: AC 220-240V ~ 50/60Hz

Power: 1850-2200W

Capacity: 1.7L