

# CAMPOMATIC

## FH200W

## FANHEATER



This product is only suitable for well insulated spaces or occasional use.

220-240V~ 50-60Hz 1800-2000W

Made in China



INSTRUCTION MANUAL

**Caution:** Read and follow all safety and operating instruction before first use of this product.

Campomatic S.R.L. Via Configliachi 5/B . 35031, Abano Terme (Padova), ITALIA

[WWW.CAMPOMATIC.COM](http://WWW.CAMPOMATIC.COM)

## USER INSTRUCTIONS


### IMPORTANT SAFEGUARDS

**PLEASE READ CAREFULLY – ALWAYS MAINTAIN SAFETY WHEN WORKING WITH ANY APPLIANCE**

### YOUR OWN SAFETY

1. Read all instructions before using the fan heater.
2. Only connect the fan heater to a single-phase socket with a main voltage as specified on the rating plate.
3. This appliance meets the electromagnetic compatibility requirements specified in BN 55104/95 with regard to interference with radio and TV sets.
4. Do not leave your home while the appliance is in function: ensure that the switch is in OFF position.
5. Keep combustible material such as furniture, cushions, bedding, paper, clothes, curtains etc. at least 50cm away from the fan heater.
6. If wall mounted do not fix to combustible material such as wooden, synthetic or plastic surfaces. Do not hang anything on or in front of the fan heater.
7. Always unplug the heater when not in use. Do not pull the cord to unplug the heater.
8. Keep the air inlet and outlet free from objects: at least 1 m in front and 50 cm behind the heater.
9. The heater must not be located immediately below a socket outlet.
10. Do not let animals or children touch or play with the fan heater. Pay attention! The air outlet gets hot during operation (more than 80°C, or 175 F ).



11.  WARNING: In order to avoid overheating, do not cover the heater.
12. Do not use this fan heater in the immediate surroundings of a bath, a shower or a swimming pool.
13. Do not use the fan heater in the rooms with explosive gas or while using inflammable solvents, varnish or glue.
14. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
15. Keep the fan heater clean. Do not allow any objects to enter any ventilation or exhaust opening as this may cause electric shock, or fire or damage to the heater.
16. WARNING: This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
17. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction

concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

18. Children of less than 3 years should be kept away unless continuously supervised.

19. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

**20. CAUTION — Some parts of this product can become very hot and cause burns.**

**Particular attention has to be given where children and vulnerable people are present.**

## **WARNINGS**


- Do not use the appliance in the vicinity of showers, bath tubs, wash basins, swimming pools, etc.
- Always use the heater in an upright position.
- Do not use the heater to dry your laundry. Never obstruct the intake and outlet grilles (danger of overheating).
- The heater must be positioned at least 50cm from furniture or other objects.
- Do not place the appliance up against walls, furniture, curtains, etc.
- The appliance must be installed so that the switches and other controls cannot be reached by persons using the bath tub or the shower.
- This appliance comes with a Y-type connection. Replacement of the feed cable must be entrusted to a technician only, because such work requires special tools.
- The appliance must not be positioned directly underneath a fixed power point.
- Do not use the appliance while it is cooling down, in order to avoid overheating with the attendant risk of fire.
- Do not use the appliance in rooms less than 4m<sup>2</sup> area.

The heater is fitted with a safety device which will switch off the heater in case of accidental overheating (e.g. Obstruction of air intake and outlet grilles, motor turning slowly or not at all).

To reset, disconnect the plug from the power for a few minutes, remove the cause of overheating then plug the appliance in again

## **OPERATION OF YOUR HEATER**

- Remove the heater from all packaging and place it in desired location.
- Ensure that there is a safe area between the heater and furniture, curtains, etc-50cm safe area from top and sides and 120cm safe area in front.

- Unwind the Power Cord and plug it into the Power Outlet.
- To activate the heater ,turn the knob clock-wise to the '  'position for cool air.
- Turn knob to ● 'for low power, ' ● 'for maximum power.

### **AUTO SATEY SHUT OFF**


The heater has a built-in safety device, which will switch the heater OFF in case of accidental overheating. To reset the heater, follow the next steps:

- Turn the control setting to the 'O' position.
- Unplug the heater and wait 5-10minutes for the unit to cool down.
- After the unit has cooled, plug it in and operate normally.
- Turn selector switch into desired position(Fan, Low or High).
- Turn the thermostat switch to the desired temperature position.
- When you feel the room temperature comfortable, turn the thermostat switch anti-clockwise slowly to the minimal direction until the appliance switches off.
- The thermostat switch will keep the room temperature at the desired temperature automatically.
- You can also turn the thermostat switch anti-clockwise to the minimum position or turn the thermostat switch clockwise to the maximum position to make the temperature lower or higher.

### **CLEANING AND MAINTENANCE**

- Be sure to switch off power supply and pull out the plug before cleaning.
- Wait for the heater to cool down sufficiently.
- Clean the body of the heater with a damp cloth. **DO NOT ALLOW** water into the appliance.
- **DO NOT** use soap or chemicals which may damage the housing of the heater.
- Allow sufficient drying time before operating again.
- Clean the air inlets and outlets regularly with a vacuum cleaner(with a regular use, at least twice a year).
- When the unit is not in use. we recommend that the heater is re-packed in its original packaging and stored in a cool ,dry place.

## Instruction for environment protection

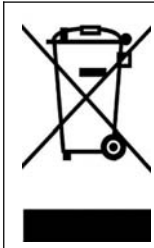

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.