 


CAMPOMATIC

AP25BF

AIR PURIFIER & BLADELESS FAN

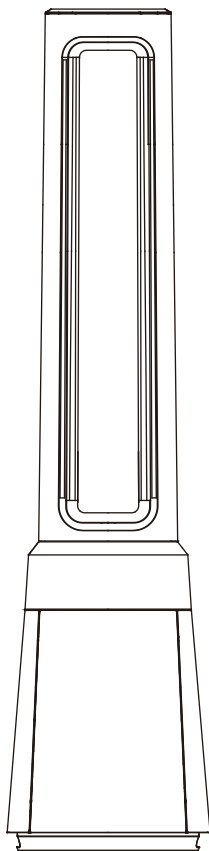

Made in China



INSTRUCTION MANUAL

Caution: Read and follow all safety and operating instruction before first use of this product.

Campomatic S.R.L. Via Configliachi 5/B . 35031, Abano Terme (Padova), ITALIA

WWW.CAMPOMATIC.COM

IMPORTANT SAFETY INSTRUCTIONS

CAUTION

1. Read Rules for Safe Operation and Instructions Carefully.
2. Keep electrical appliances out of reach from Children or infirm persons. Do not let them use the appliances without supervision.
3. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

WARNING

1. If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
2. To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
3. When the appliance is not in use and before cleaning, unplug the appliance from the outlet.



4.  Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe

IMPORTANT SAFETY INSTRUCTIONS

WARNING

recycling. The packaging material is recyclable. Dispose of the packaging in an environmentally friendly manner and make it available for the recyclable material collection-service.

 
5. Indoor and household use only.
6. When the fan was assembled, the rotor blade guard shall not be taken off anymore.
 - Prior cleaning unplug the fan.
 - The rotor guard shall not be disassembled/opened to clean the rotor blades.
 - Wipe the fan enclosure and rotor blade guard with a slightly damp cloth.
7. The appliance is only to be used with the power supply unit provided with the appliance.

PRODUCT INTRODUCTION

Note:

All the pictures in this manual are for explanation purpose only. Any discrepancy between the real object and the illustration in the drawing shall be subject to the real subject.


Parts name

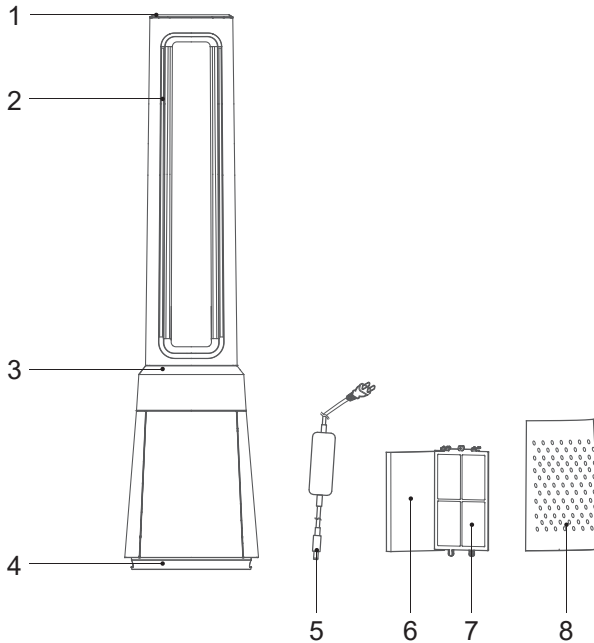


NO.	Description	NO.	Description
1	Top cover	5	Adapter
2	Air outlet	6	HEPA filter*2
3	Display and Control panel	7	Pre-filter*2
4	Base	8	Air inlet grille*2

PRODUCT INTRODUCTION

 Parts list



Remote Control x 1

 


Instruction x 1


INSTALLATION INSTRUCTIONS

Installation Procedures

 
1 Remove the air inlet grille.

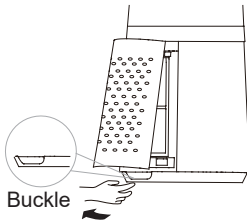

 
2 Take out the pre-filter
Press the raised part on both sides to pull it outwards, and take out the pre-filter.

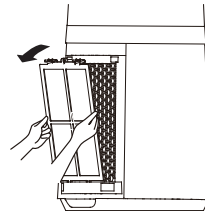

 3 Remove the protective film of the filter.

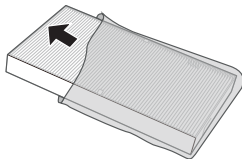


4 Install the HEPA filter.

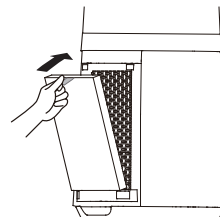 


INSTALLATION INSTRUCTIONS

Installation Procedures

 
- 5 Install the pre-filter. Align the slot position at the bottom and buckle up the upper U-shaped buckle.

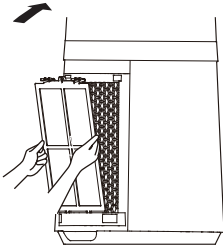

 
- 6 Install the air inlet grille. Align the upper two buckles and press them tightly, then press the two sides at lower part, slowly and gently buckle the air inlet grille.

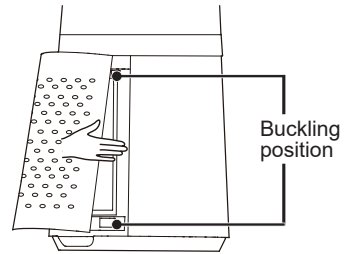

 - 7 Install the adapter, Tighten the plug with the socket position of the base.

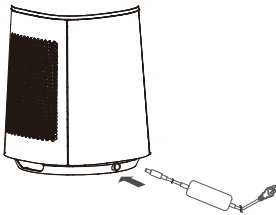

- 8 Plug power supply.

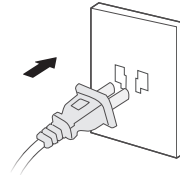 









Note:

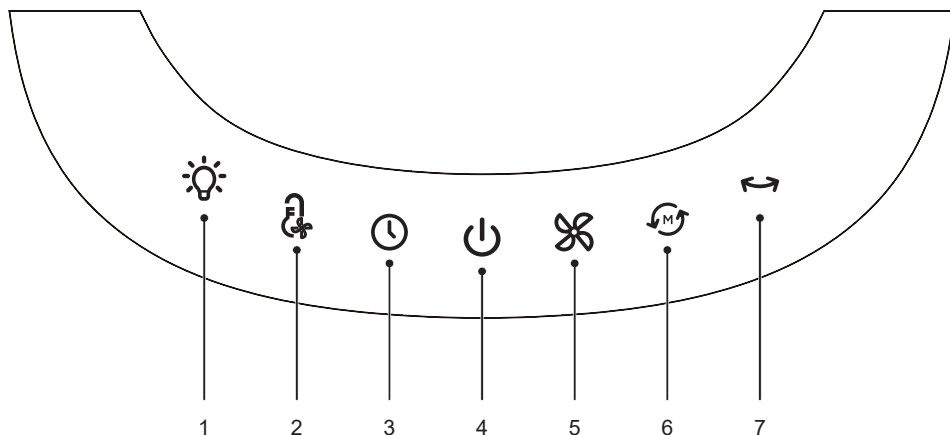 It is recommended to clean the filter once every two weeks and replace it once every six months (the cleaning and replacement cycle can be adjusted according to the use environment).

OPERATION INSTRUCTIONS

 
Control Panel Operations









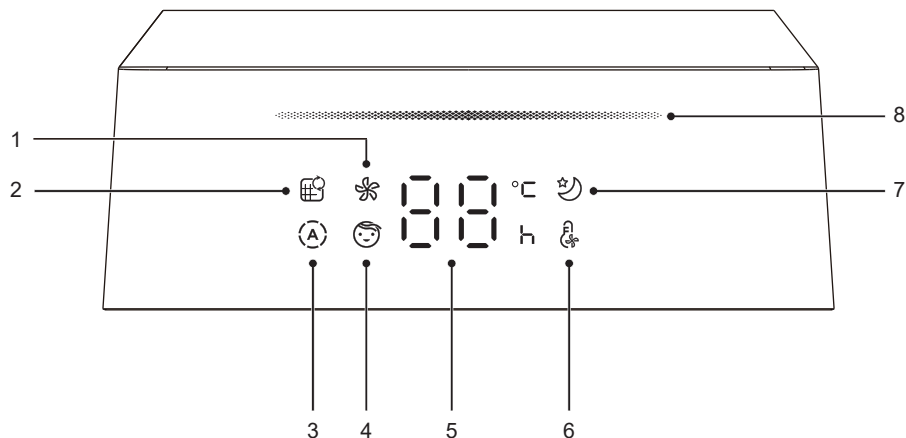

NO	Function	Description
NO.1		• Touch this button to turn the air quality light on and off.
NO.2		• Touch this button to open the function of the wind varying with temperature.
NO.3		• Schedule to shut down in the power-on state, and schedule to start up in the standby state; Touch this button to set the timer (the display cycles among 0-1-2-...-12-0h); 0h means that the timer is canceled.
NO.4		• Startup/Standby
NO.5		• Touch this button to switch the wind speed (cycles among level 1-2-3-...-10-1-2).
NO.6		• Touch this button to switch the wind mode among sleep , baby, automatic wind (wind changing with air quality) and normal. When the filter replacement reminder light is on, press and hold this button to turn off the reminder light.
NO.7		• Touch this button to start/stop the swing.

OPERATION INSTRUCTIONS

Display Panel








NO	Function	Description
NO.1		• This indicator light is on in normal wind mode.
NO.2		• Filter replacement reminder icon; when the icon stays on, the filter needs to be replaced.
NO.3		• This indicator light is on, the wind varies with air quality.
NO.4		• This indicator light is on baby wind mode. The fan automatically adjusts the level according to the program. There are two levels: 1, 2 and you can adjust the level of the baby wind by pressing the wind speed button.
NO.5		• Displays the wind speed level or set timer, and displays the temperature in the wind mode.
NO.6		• This indicator light is on in intelligent wind mode (wind changing with temperature). In baby wind and auto mode, only the light is on, but does not perform this function.
NO.7		• This indicator light is on in sleep wind mode. Start the sleep wind function, and the fan automatically adjusts the level according to the program; there are three levels: 1, 2 and 3; you can adjust the level of the sleep wind by pressing the wind speed button.
NO.8		• The color of this indicator light reflects the air quality. As the air quality gets better, the color of this light is red, yellow, blue and green in turn.

 OPERATION INSTRUCTIONS

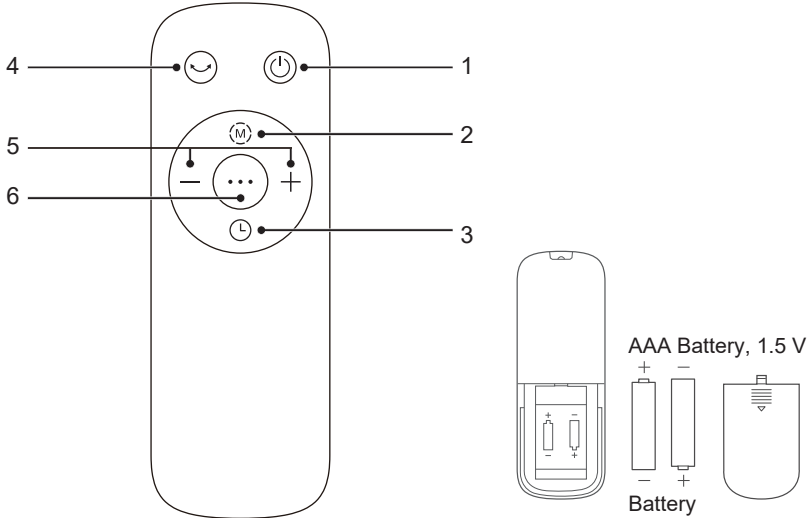Remote Control

- The remote control should be normally used on the front of the product and 30 degrees of the deviation angle.
- The battery contains many heavy metals, acids and bases, etc., which may threaten human's health; Waste batteries should be recycled separately.



NO	Description
No.1	 Startup/Standby
No.2	 Switch the wind type
No.3	 Set the timed shutdown/reserved startup
No.4	 Startup or shutdown oscillating
No.5	— + Press “+ , -” to set the wind speed or timing time
No.6	• • • Turn on intelligent wind (wind changes with temperature)

OPERATION INSTRUCTIONS

Batteries Installation

Battery not included in the packaging

- 1 Slide the battery compartment cover.

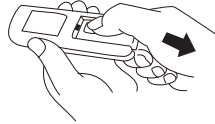 


Fig 1

- 2 Insert the batteries, and make sure that the batteries are placed as shown in the Fig 2.

 


Fig 2

- 3 Slide back the battery cover.

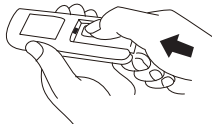 


Fig 3

Note:

Use size “AAA” manganese or alkaline batteries. Do not use rechargeable batteries.

Battery Warning As Below

1. Do not dispose of batteries in fire, batteries may explode or leak
2. Do not mix old and new batteries.
3. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
4. Non-rechargeable batteries are not to be recharged.
5. Batteries are to be inserted with the correct polarity.
6. Exhausted batteries are to be removed from the product.
7. The batteries must be removed from the remote controller before it is scrapped and that they are disposed of safely.

OPERATION INSTRUCTIONS

Additional Features And Maintenance

- Intelligent memory

When the fan is turned off or powered off, it will run in the state before turning off or power off when the power is powered on again (the timing function is not memorized).

- Screen-off function

In case of no operation for 60 seconds during normal operation, the indicator light on the body will be automatically off, but the fan will continue to operate. Press the ON/OFF button to turn off the fan when the screen is off, and press the other button to restore display.

Filter Replacement

 
- 1 Filter model: FQ150CJ-2
(including 2 sets).



- 2 When the indicator light for replacement of filter is on, the prompt that reminds you of filter replacement will appear. If it is not replaced in time, the prompt will appear during each startup.



- 3 Replace a new filter.

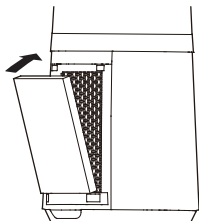


- 4 Long press the mode button for 3 seconds to turn off the indicator light for filter replacement.




OPERATION INSTRUCTIONS

Pre-filter Cleaning

 
1 Unplug the power cord.

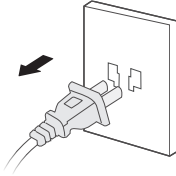


2 Take out the pre-filter.

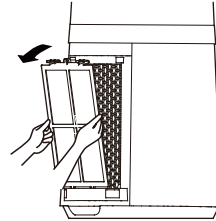 


3 Remove the dust with vacuum cleaner.

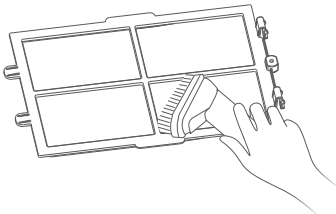 


 4 Install the machine in reverse order and plug power supply.

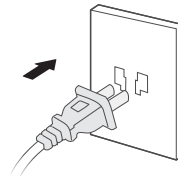

PRODUCT PARAMETER

 Model	Working Voltage	Rated power	Noise
AP25BF	24V 	36W	≤61dB

 Parts	Input	Output
Adapter	100-240V~ 50/60Hz 1.5A	24V  1.5A

CLEANING AND MAINTENANCE

The fan requires minimal maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is needed.

1. Be sure to unplug from the electrical supply source before cleaning.
2. Plastic parts should be cleaned with mild soap and a damp cloth or sponge. Thoroughly to remove soap film with clean water.
3. Be sure not to make water or other liquid enter inside of motor.

TROUBLESHOOTING

Operation of your appliance can lead to errors and malfunctions. The following tables contain possible causes and notes for resolving an error message or malfunction. It is recommended to read the table below carefully in order to save your time and money that may cost for calling to the service center.

Problem	Cause	Solution
The machine does not work properly after installed	• The power cable is not plugged in or has poor contact.	Make sure the plug is properly inserted into the socket.
	• The switch on the body is not turned on.	Turn on the switch on the body.
The remote does not work	• The battery needs replacing.	Replace the battery.
	• The remote is being used more than 5m away from the fan.	Use the remote closer to the fan and make sure it is pointing directly at the display panel.

