

CAMPOMATIC

BLDC Digital Hair Dryer Instruction Manual



Model: HP16B
220-240V~ 50/60Hz 1600W

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be observed, including the following:

Note: Please note that the first time using it, there may be smoke coming out from the machine, and it also has a bad flavour. Please rest assured that it is a normal phenomenon, as the heating wire is soaked in the oil before assembling; when 1st working, it needs to volatilize the oil and cause some smoke and bad flavour.

**READ ALL INSTRUCTIONS BEFORE USING.
KEEP AWAY FROM WATER.**

DANGER

To reduce the risk of electric shock:

- Always unplug this appliance from the electrical outlet immediately after using it.
- Do not use it while bathing or in the shower.
- Do not store this appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- Do not reach for an appliance that has fallen into the water. Unplug it immediately.
- Unplug this appliance before cleaning it.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

- An appliance should never be left unattended when it is plugged in.
- This appliance is not intended for use by people (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities or special needs.
- Use this appliance only for its intended use as described in this manual. Do not use attachments

not recommended by the manufacturer.

- Never operate this appliance if it has a damaged cord or plug, if it is not working properly if it has been dropped or damaged, or if it has been dropped into water.

NOTE: If the power supply cord is damaged, it should be replaced by qualified personnel at an authorized service center.

- Keep the cord away from the heated surfaces. **Do not wrap the cord around the appliance.**
- Never use while sleeping.
- Never drop or insert any object into any of the appliance's openings.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use an extension cord.
- Do not direct hot air toward eyes or other heat-sensitive areas.
- Do not place the appliance on any surface while it is operating.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 60°C (140°F).
- This appliance is for household use only.
- Attachments may be hot during use. Allow them to cool before handling.
- Do not plug or unplug this appliance when your hands are wet.
- For additional protection, we advise you to install a residual current device (RCD) with a rated residual operating current not exceeding 30mA in the electrical circuit supplying the bathroom. Ask your installer for advice.



 
CAUTION: This product is not suitable for use in a bath or shower.

SAVE THESE INSTRUCTIONS


Packing Contents

- Hair Dryer x1
- Concentrator x1
- Diffuser x1
- Instruction manual x1

Product introduction

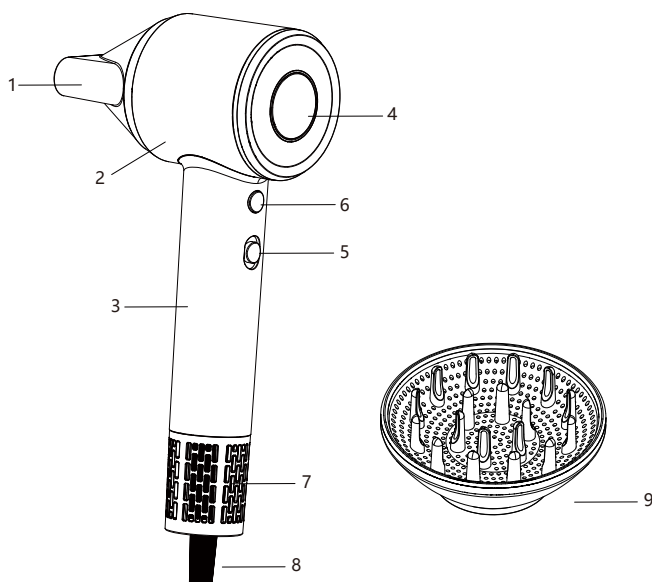


 - ① Magnetic suction nozzle ② Main body ③ Handle
 ④ Display screen ⑤ Switch button ⑥ Temperature button
 ⑦ Mesh cover ⑧ Wire protection sleeve ⑨ Difusser

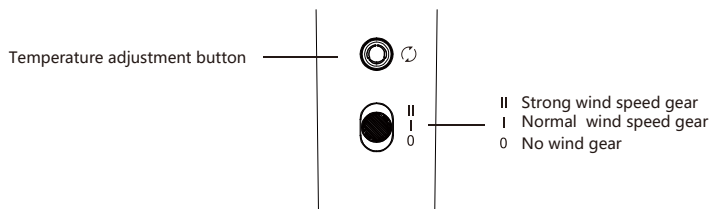

Short press the mode key to cycle the air temperature from "25°C—55°C—75°C—99°C"

 That means "cold air—low hot air—middle hot air—high hot air"

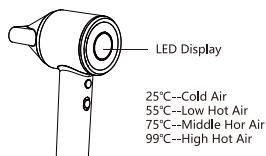

Styling attachments

(1) Concentrator

The concentrator enables you to direct the airflow at your hair that you are styling.

Connect the concentrator by simply snapping it onto the appliance. Disconnect it by pulling it off.

(2) Negative ion maker

This model offers negative ion, when used, the negative ion maker shall work. It shall make the air be purified and make hair more soft and more clean, the ionic can perfect hair.

(3) Diffuser

The Diffuser is good for your hair styling.

Connect the diffuser by simply snapping it onto the appliance. Disconnect it by pulling it off.

Hair Care Tips

- Keep the dryer about 8 inches away from your head to avoid burning your scalp or damaging hair.
- Always keep the dryer pointed down the hair shaft to smooth the cuticle and create a silky, shiny style.
- To help prevent heat damage and add shine, spritz damp hair with heat protection spray before blow drying. To create a style with lots of body, apply volumizing mousse to towel-dried hair. Distribute it evenly from roots to ends, then blow dry as usual. Hair will be soft, shiny, and full of volume.

Electrical Features

Overheating

This appliance is equipped with an automatic thermal limiter, which will cycle off when overheated and come back on when cooled down. If the unit cycles off, unplug the cord for several minutes before restarting.

Cleaning and Maintenance

Maintenance instructions

- Keep all intake openings clear of dust accumulation. See “Cleaning Instructions” below. No other maintenance or lubrication is required.
- If the cord becomes twisted due to use, periodically straighten it. Store appliances and cords where they will not be damaged. Do not wrap the cord around the dryer.
- Do not attempt to repair the appliance yourself.

Cleaning instructions

1. The appliance can be cleaned with a dry cloth.
2. The attachments can be cleaned with a moist cloth or rinsed under a running tap.

Remove the attachments from the appliance before cleaning them. Make sure the attachments are dry before using or storing them.

Never rinse the appliance with water.

3. Auto Clean Technology

Turn on the hairdryer By pressing the temperature adjustment button for 6 seconds, the fan blades will automatically rotate in reverse to deep clean the filter.

Storage

When not in use, unplug the unit. Allow it to cool, and store it out of reach of children in a safe, dry location. Never wrap the cord around the appliance, as this will cause the cord to wear prematurely and break. Handle the cord carefully, and avoid jerking, twisting, or straining it, especially at plug connections.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

To return your used device, please use the return and collection systems or contact the retailer where the product was purchased.

They can take this product for environmental safe recycling.