

CAMPOMATIC

AC Motor Hair Dryer Instruction Manual



Model: HP24AC
220-240V~ 50/60Hz 2400W

Contents

 
Package Include	-----	3
Product Overview	-----	3
Technical Parameters	-----	3
Instruction For Use	-----	3-5
Troubleshooting And Analysis	-----	6
NOTICE	-----	6-7
Warranty And Return	-----	7
KEEPING/ CLEANING /CARE	-----	7

Package Include:

- 1* Hair dryer
- 1* Smooth nozzle
- 1* Instruction manual

Units Parts Name

1. Concentrator
2. Cool shot button
3. Temperature Rocker Switch
4. Speed Rocker Switch
5. Plug & Power cord
6. Cosmetic plate
7. Removable
8. Front housing
9. Rear housing
10. Cord bushing
11. Big diffuser

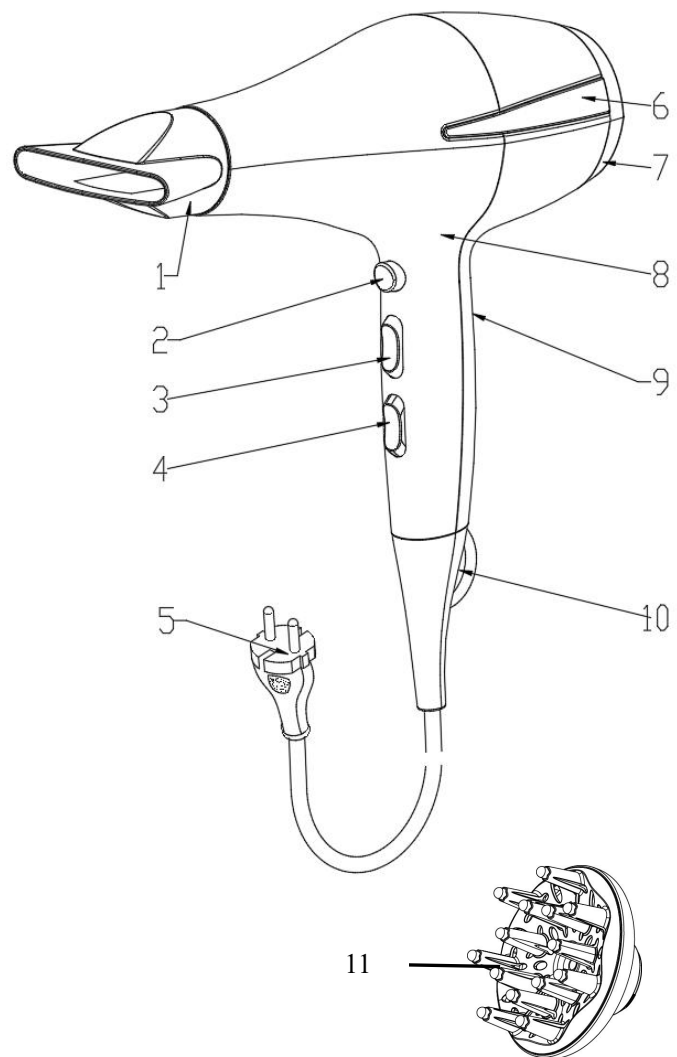

Technical Parameters

Product name	AC Motor Hair Dryer
watts	2400W
voltage	220-240 V~ 50/60 Hz

Instruction for use:

Dry hair only

1. Connect the power supply and open the switch on the handle.
2. Set the winding gear according to the actual use:
 - I. Gentle warm wind keeps your hair hydrated and prevents it from drying out.
 - II. Strong wind for quick drying.
3. Hold the hair dryer, keep a distance about 5cm from the hair, and move back and forth at a constant speed.
4. Use the cold wind to protect your hair while keeping your hair dry when the hair is about to be dried.
5. Push the switch to "0" and unplug the power cord after use.

Product function and technical parameters

1. Process products, product design simple, meticulous workmanship.
2. Adopt three-layer air inlet filtration, which can effectively prevent foreign matter from entering the air duct and affect the normal use of the product.
3. 1800w power, can effectively and quickly blow-dry hair.
4. Super large amount of negative ions (>2 million/cm³), making hair more pliable and smooth when used.
5. Independent cold air, can make the hair quickly set.
6. Two-speed and two-temperature, one-key switch between normal and nursing files can be achieved.
7. Detachable air inlet cover is convenient to clean dirt and make the product change instantly.
8. Double-layer air tip gives you a warm experience and avoids the risk of hot hand.

How to use


1. This product is only suitable for 220-240V voltage power supply, please do not plug the product into a higher or lower efficiency power supply for use,

220-240V normal use

380V Error voltage


100-150V Error voltage

2. Make sure the power switch is in position " 0 ", then insert the power plug into the power socket, and then push the switch button on the handle to turn it on and off.

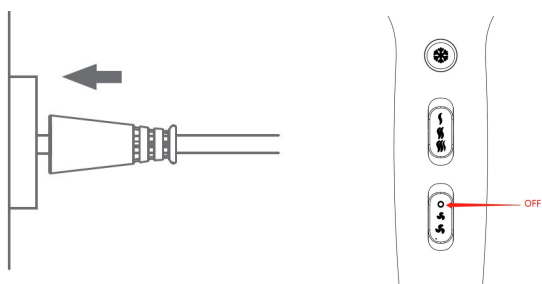


3. Switched the Speed switch to Low speed mode, and switched the speed switch to High speed mode. Switched the heating switch to Low heating setting mode, Switched the heating switch to


Med heating setting mode, for constant temperature; Switched the heating switch to High heating setting mode, for hot air

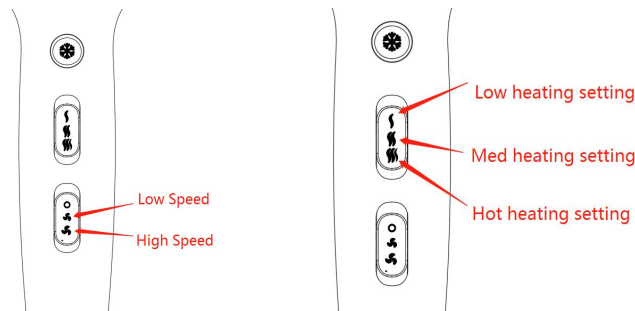


4. When the switch is in gear " I " or " II ", you can press the cold air button to enter the respective cold air mode, and release the button to return the product to the corresponding hot air mode.

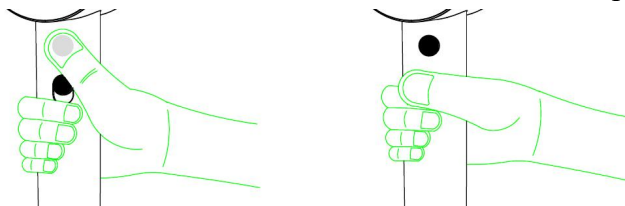

5. The product is equipped with a plug gable air nozzle and big diffuser, which can be installed during hair blowing, so as to accurately blow dry hair and shape hair.

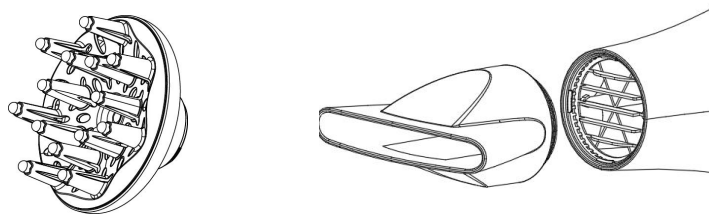


6. After use, you need to push the switch button to position " 0 ", the product is off, and pull out the power plug at the same time.

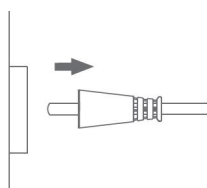

7. There is a strap on the power cord. You can tie up the long power cord. It is convenient for you to store the product in a safe, dry and clean place for your next use.

8. Please do not discard this part when using! There are three layers of filtration at the inlet and a removable inlet cover. You can remove the inlet cover from time to time to clean up the ash and dirt deposited in the inlet net. In this way, the product will accompany you for a long time to live a healthy and happy life.

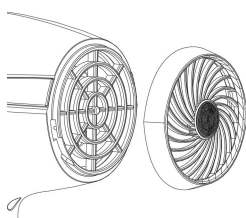

Please do not discard
this part when using!

Troubleshooting and Analysis:

malfunction	Possible reason	solutions
Can't start or interrupt continuously	1. The power cord is not plugged in well. 2. The power cord is disconnected. 3. Poor contact of the switch.	1. Plug in the socket. 2. Ask the professional to replace the power cord. 3. Ask the professional to replace the motor. 4. Contact us.
overheat	1. The air inlet is blocked. 2. The motor is not normal.	1. Please clean the air inlet regularly. 2. Send the seller or the company to repair or get a replacement.
The wind is obviously less, and the temperature rises.	1. Air inlet blockage. 2. The motor is not normal. 3. Diode damage.	1. please clean the air inlet regularly. 2. Send it to the seller or the company to overhaul.
The power cord's temperature is too high or the plug's temperature is too high. Sharply.	Power cord disconnection is poor.	1. Ask the professional to replace the power cord. 2. Contact us.
Does not work or does not respond after the motor starts.	1. Motor carbon brush wear abrasion. 2. Motor damage.	1. Please stop using and contact us.
There are noise and burnt smell.	Internal accessories are not normal.	Please stop using and contact us.
Noise when shaking or sharp friction when starting up.	Internal support is broken and damaged.	Please stop using and contact us.

NOTICE:

- Please read this instruction manual carefully before use.
- Please make sure the voltage marked by the product meets the local's before connecting to power.
- Please check the power cord regularly. Do not use this product again if the plug, power cord, or the product itself is damaged.
- Always unplug the appliance from the power supply before cleaning and when not in use.
- Do not block the air intake and exhaust ports at the same time during use, otherwise the blower may overheat.
- Do not place the product in a humid, high temperature and or high-pressure environment to prevent the components from being damaged.
- To ensure safety, it is recommended to install a leakage protector in the bathroom's circuit.
- Never use accessories or parts from other manufactures or the warranty will be void.
- Please keep this item far away from places with water. Do not use this product near a bathtub, spray head, sink, or other container containing water. If the product accidentally falls into the water, immediately unplug the power cord and do not put your hands in the water. And it needs to be checked by a professional maintenance staff before using again.
- Unplug it immediately after using it in the bathroom. It is still dangerous to be close to the water even if the

power is off.



WARNING- Do not use this appliance near water in bathtubs, basins or other vessels.

- Always turn off its power even if you only leave the product for a while.
- Make sure the hair does not touch the air inlet to prevent it from being inhaled while using. Keep air inlet filter dust and fluff-free.
- This hair dryer comes with an overheat protection device, which can automatically shut down when the temperature of the hair dryer is too high. At this time, immediately turn off the power switch and unplug the plug from the power outlet, let it cool for a few minutes before using it. After checking that there is no hair or foreign matter at the air inlet and outlet, turn on the power switch.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety
- Never submerge or wet the dryer.

Warranty and return

This product is entitled to a 1 year warranty with the order number after purchase. We will send a new replacement if the product has any non-human quality problems during the warranty period. At the same time, you can also enjoy free technical support for free. We have a professional technical service team to serve you 24 hours a day.

SAFETY

- Ensure that the air inputs and outputs are not blocked.
- If that does happen, thermal temperature limiter guards against overheating.

KEEPING/ CLEANING /CARE

Child not use the appliance alone when adult not in locale ;

 
When hand is wet it don't use the appliance

When find cord destroy, don't use, and must be send to professional service

When the appliance is using, don't jam in wind-in lid, so as towel, clothing.

- Please always disconnect your dryer before cleaning.
- Please do not put the appliance into water.
- Please clean the dust and hair by regular cleaning.
- Please clean the appliance with a slightly damp cloth and dry it up with a dry cloth.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.