

142x210mm

CAMPOMATIC

Hair Straightener

User manual

Model no.: HS231D

Read this manual carefully before using. Keep it properly.



Product overview

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER.

DANGER

As with most electrical appliances, electrical parts are electrically live even when switch is off. To reduce the risk of death by electric shock:

- Always unplug this appliance from the electrical outlet immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Unplug this appliance before cleaning it.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when it is plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities or special needs.
- Use this appliance only for its intended use as described in this manual.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Keep the cord away from the heated surfaces. Do not wrap the cord around the appliance.
- Never use while sleeping.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use an extension cord.
- This appliance is hot when in use. Do not let eyes or bare skin touch heated surfaces.
- Do not place the heated unit directly on any surface while it is hot or plugged in.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 60°C.
- This appliance is for household use only.
- Do not plug or unplug this appliance when your hands are wet.

Product Features

Thank you for purchasing the flat iron. Please carefully read the instructions contained in the booklet, and keep them in a safe place for future reference.

TECHNICAL DATA:

220 - 240 V~ 50/60Hz 48W

Anti-scald treatment at the hand gripping position



Key Features:

Next Generation Floating Ceramic Plate
Instant high heat - ready in 30 seconds
Digital precise heat ,temperature -230° C
ON/OFF button
Highest Grade Ceramic - smooth, snag free glide
Salon length, swivel cord

HOW TO USE

Heat Settings

Take extra care when using a professional styler. To prevent hair damage, make sure to use the correct temperature setting for your hair type.

POWER Button Features

- Set to desired temperature setting.
- During heat up time, the temperature will pulse to 230°C until the desired temperature is reached.
- When the appliance reaches the desired temperature, the pulsing will stop, the correlating LED indicator of temperature (230° C) will be displayed.

Usage Tips

Straightening Your Hair

1. Hair should be dry and free of tangles before using the hair straightener..
2. Plug the styler into an electrical outlet. Press and hold the POWER button about 2 seconds until the unit turns on and the LED lights up.

3. Adjust the temperature using the temperature buttons. The indicator will flash while the unit heats up, and then glow steadily when it has reached the selected temperature.
4. Divide hair into manageable sections and clip the upper layers on top of your head, out of the way. Work with underneath layers first.
5. Test the styler on a small section of hair, then adjust the temperature up or down before styling the rest of your hair.

NOTE:

- If you find that you need a higher setting while straightening your hair, simply adjust the temperature to a higher heat setting.
 - While straightening your hair, if you find that you need a lower setting, adjust the temperature to a lower heat setting. Because the unit is already hot, it may take a few minutes to cool off.
6. Take a small section of hair, pull down and away from your scalp, and hold it taut.
 7. Starting at the roots, clamp hair firmly between the plates and run the styler down the entire hair strand, from root to tip, in one smooth stroke. Do not hold the styler in one area for a long period of time or damage to hair may occur.
 8. To create curves or flicks, rotate your wrist to turn the straightener in toward your head or out away from your head as you run the straightener down the hair strand.
 9. Repeat with all the sections of your hair, working with the underneath layers first, then the top and sides to finish.
 10. When you are finished styling, press and hold the POWER button to turn the unit off, unplug it, and allow it to cool before storing.

MAINTENANCE

Cleaning

Make sure the unit is unplugged and cool. Use a damp cloth to clean the plates and the outside of the power handle. No other maintenance of the unit is required. This appliance has no user serviceable parts.

Storage

Unplug the unit whenever it is not in use. Allow it to cool, then store it out of reach of children in a safe, dry location. Never wrap the cord around the appliance. This will cause the cord to wear prematurely and break, thus voiding the warranty. Handle the cord carefully and avoid jerking, twisting, or straining it, especially at plug connections. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.